





PUSHBUTTON BUBBLER

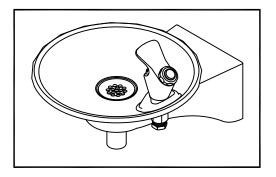

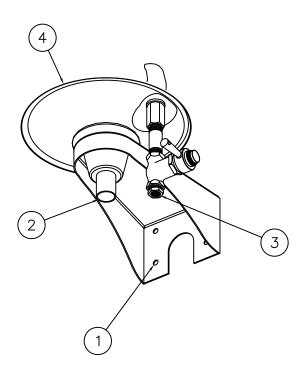


OPTIONAL -PT1 1-1/4" O.D. P-TRAP

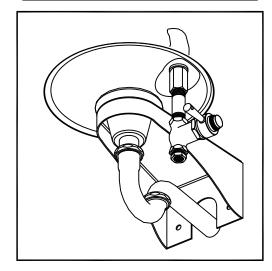


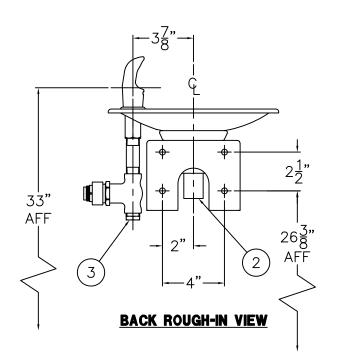

INSTALLATION INSTRUCTIONS:

 - A- STRUCTURALLY REINFORCE THE WALL BEHIND THE FOUR 3/8" DIAMETER MOUNTING HOLES (1) AT THE DIMENSIONS SHOWN AND INSTALL WALL ANCHORS BY OTHERS.
- B- ROUGH-IN WASTE OUTLET FOR THE 1-1/4" OUTER DIAMETER PLAIN END TAILPIECE (2).
- C-ROUGH-IN WATER SUPPLY (3) AT DIMENSION SHOWN FOR 3/8" NPT FEMALE LEVER VALVE SUPPLY INLET. RECOMMENDED UNION AND SHUTOFF VALVE TO BE SUPPLIED BY OTHERS.
- D- CAREFULLY REMOVE FIXTURE (4) AND COMPONENTS FROM THE PACKAGING PREVENTING SCRATCHING AND DAMAGE.
- E- SECURELY ANCHOR FIXTURE (4) TO WALL THRU MOUNTING HOLES (1) WITH ANCHORING HARDWARE BY OTHERS.
- G-MAKE-UP 1-1/4" O.D. WASTE CONNECTION TO TAILPIECE (2).
- H- FLUSH WATER SUPPLY (3) BY OTHERS OF ALL DEBRIS PRIOR TO CONNECTING TO FIXTURE.
- I- CONNECT THE WATER SUPPLY (3) BY OTHERS TO 3/8" NPT FEMALE INLET. STOP ON THE SUPPLY IS RECOMMENDED.



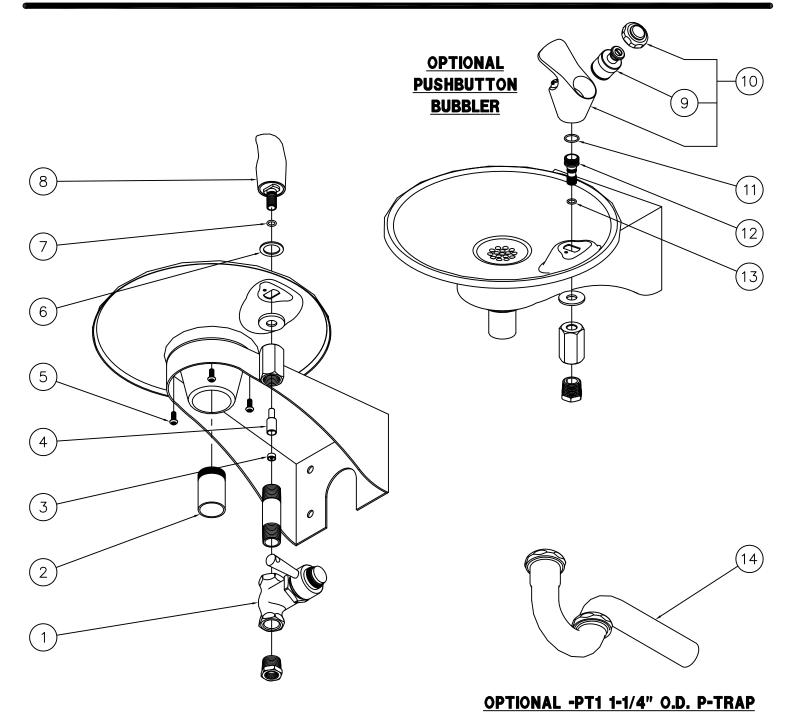

			SELF CLOSING LEVER VALVE	8	7018-112-199	SOLID STAINLESS STEEL BUBBLER		
	2	4952-002-000	1-1/4" OUTER DIAMETER TAILPIECE	9	7000-060-000	VALVE CARTRIDGE		
	3	0471-010-000	FLOW REGULATOR	10	2990-013-002	DECK MOUNTED SST PUSHBUTTON BUBBLER		
	4	7018-008-199	FLOW REGULATOR ADAPTER	11	0404-015-000	O-RING		
	5	0112-056-000	CENTER REJECT ALLEN BUTTON HEAD SCREW	12	7018-011-199	BUBBLER ADAPTER		
	6	7000-007-000	BUBBLER GASKET	13	0404-011-000			
	7	0404-011-000	O-RING	14	4953-002-000	1-1/4" x $1-1/4$ " OUTER DIAMETER P-TRAP		
IT	ЕМ	PART NUMBER	DESCRIPTION	ITEM	PART NUMBER	DESCRIPTION		
	THE STATE OF THE S							

MURDOCK—SUPER SECUR P.O. Box 3527 Industry, CA 91744 15125 Proctor Ave Industry, CA 91746 Phone: (800) 591–9880 MANUI www.murdock—supersecur.com

ROUND BOWL WALL MOUNTED DRINKING FOUNTAIN


MANUFACTURE DATE	DATE ISSUED	DRAWING NUMBER
JANUARY 2006	10/21/08	
TO PRESENT	DATE REVISED	9938-250-5 M 0
IO PRESENT	05/20/16	

LEVER VALVE DRINKING FOUNTAIN

CONDITION:

SOLUTION:

NO WATER FLOW:

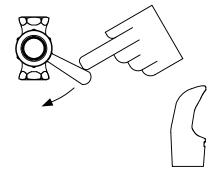


- 1.1 Check water main supply open.
- 1.2 Inspect stop (by others) open & no debris.
- 1.3 Inspect strainer (by others) for debris clean.
- 1.4 Inspect flow regulator for debris clean or replace.
- 1.5 Replace lever valve.

WATER DRIPS / WILL NOT SHUT OFF:



- 2.1 Inspect lever valve for debris clean.
- 2.2 Replace lever valve.

REDUCED WATER FLOW:

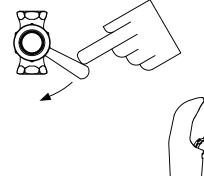

- 3.1 Check water main supply for 20 psig minimum flow pressure.
- 3.2 Inspect stop (by others) open & no debris.
- 3.3 Inspect strainer (by others) for debris clean.
- 3.4 Inspect bubbler for debris clean.
- 3.5 Inspect flow regulator for debris clean or replace.
- 3.6 Replace lever valve.

Refer to drawing #9940-206-0M1 for Lever Valve Maintenance Detail to locate solutions above.

TO PRESENT

MURDOCK-SUPER SECUP P.O. Box 3527 City of Industry, CA 91744 Phone: (800) 591-9880	*
www.murdock-supersecur.com	MANU
	⊢ J.

LEVER DRINKING FOUNTAIN VALVE MAINTENANCE INSTRUCTIONS

MANUFACTURE DATE

JANUARY 2006


DATE ISSUED

10/21/08

DATE REVISED 9940-205-0M1

DRAWING NUMBER



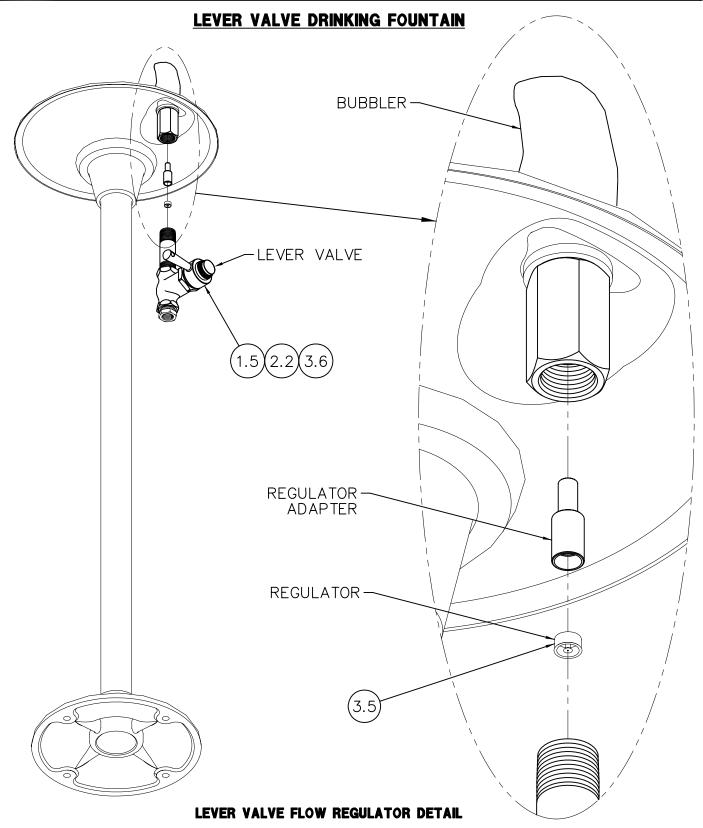

Refer to drawing #9940-205-0M1 for Valve Maintenance Instructions numbered solutions detailed above.

