


HYDRANTS

M-3912, M-3913, M-3914 NON-FREEZE POST HYDRANT POST HYDRANTS WITH 1-1/4" (32), 1-1/2 (38)

OR 2" (51) CONNECTIONS

FUNCTION: Used where an above ground water outlet is required in areas which are subject to freezing temperatures. Freezing is prevented by burying the valve housing below the frost line and draining water from the casing after shut-off.

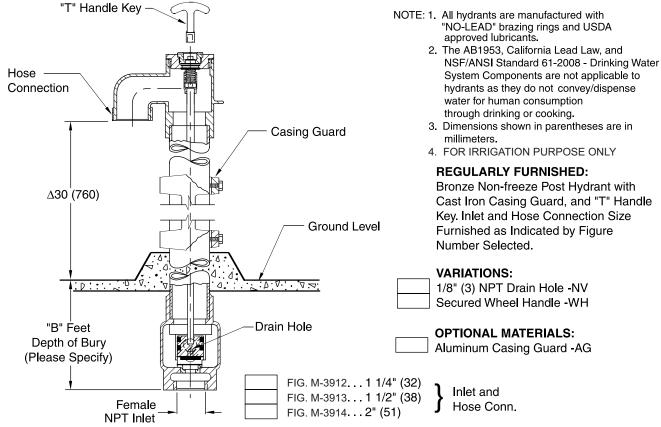

B (Depth of Bury) = 02(610), 03(915), 04(1220), 05(1525), 06(1830), 07(2135) or 08(2438) Feet \triangle Regularly furnished (unless otherwise specified)

TECHNICAL DATA

Non-Freeze Post Hydrants are supplied with a special valve housing which prevents freezing of hydrant during non-use periods. The valve housing must be installed below the frost line which prevails for the area of installation. The valve housing has a drain hole which drains the casing when the hydrant is shut off. In effect, there is no water in the casing during non-use periods. Since water from the drain hole is normally allowed to drain into the ground, the valve housing should be set in a bed of gravel. Water drained from the casing can then seep into the ground. Some locations which require Non-Freeze Post Hydrants cannot tolerate water draining from the drain hole. Examples are parking garages, plazas and roof decks used for recreational purposes. Often in these types of applications the valve housing will protrude into a finished area which is not subject to freezing temperatures. To eliminate the problem of water drainage in this type of installation, can supply a tapped drain hole in the valve housing. Through this tapped drain hole, the water from the valve housing can be piped to a suitable drain.


▲ WARNING: Cancer and Reproductive Harm - www.P65Warnings.ca.gov


Member of MORRIS GROUP



Hydrant Part List

NON-FREEZE POST HYDRANT

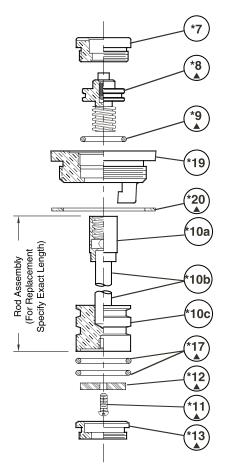

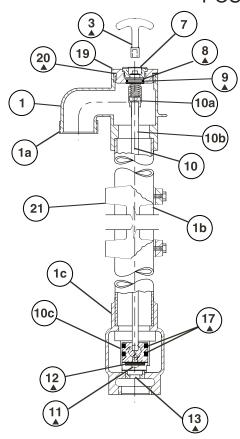

▲THESE REPLACEMENT PARTS AVAILABLE IN HPRK -5

MAINTENANCE INSTRUCTIONS

- Shut off water supply.
 Remove face nut.
 Pull stem out for complete access to all working parts.
- 4. Check all working parts for replacement.5. Replace complete stem assembly and face

REPLACEMENT PARTS LIST - SPECIFY FIGURE NO. WHEN ORDERING							
No.	DESCRIPTION	No.	DESCRIPTION				
1 1a 1b 1c 3 7 8 9 10 10a	Head/Casing Assembly Head Casing Valve Housing Key Face Nut Operating Screw Operating Screw "O" Ring Operating Rod Assembly Coupling	10b 10c 11 12 13 17 19 20 21	Rod Plunger Washer Screw (No. 10-24 Washer (Neoprene)_ Removable Seat Plunger "O" Ring Face Nut Seat Face Nut Seat Gasket Casing Guard				

Murdock Mfg.™ warrants that its products are free from defects in material or workmanship under normal use and service for a period of one year from date of shipment. Murdock's liability under this warranty shall be discharged solely by replacement or repair of defective material, provided Murdock™ is notified in writing within one year from date of shipment, F.O.B. Industry, California.

SUMMARY AL FOR	Model Number & Options	Qu	uantity	All dimensions are subject to manufactures tolerance of plus or minus ½" nominal and subject to change without notice. Murdock assumes no responsibility for use of	
SELECTION SU & APPROVA MANIJEACTI	Contact Signature (Approval for Manufacturing)	TitleDate		void or superseded data Dimensions may change with the addition of optional accessories. Murdock Mfg.™, Member of Morris Group International™. Please visit www.murdockmfg.com for most current specifications.	

MURDOCK MFG. • 15125 Proctor Avenue • City of Industry, CA 91746 USA Phone 800-453-7465 or 626-333-2543 • Fax 626-855-4860 • www.murdockmfg.com

Member of